

AG964-07E ABZ TMR Encoder Sensor Demonstration Kit



SB-00-120

NVE Corporation

(800) 467-7141

sensor-apps@nve.com

Kit Overview

Included in the Demonstration Kit

- ASR022-10E ABZ Noncontact TMR Encoder Sensor
- Part # 12426 split-pole Alnico 5 round horseshoe magnet
- A four-digit display to indicate rotation
- LEDs for A, B, Z, and Direction outputs
- Plastic magnet locating fixture
- Powered by two AAA batteries (included)

ASR022 Sensor Features

- Optical encoder replacement
- · Inherent dust and contaminant immunity
- Up to 15,000 RPM
- · Wide airgap tolerance
- 512 virtual lines (128 cycles) per revolution
- -40°C to 125°C operating range
- Ultraminiature 2.5 x 2.5 mm DFN package

ASR022 Applications

- Motion control
- Robotics
- Automotive applications
- Internet of Things (IoT) end nodes

ASR022 Sensor Description

ASR022 noncontact TMR encoder sensors provide precise pulses indicating angular motion, and is smaller, lower power, and more accurate than other magnetic encoders.

An industry-standard ABZ interface allows the ASR022 to replace legacy optical encoders and provide noncontact operation, wide mechanical tolerance, and inherent dust and contaminant immunity.

The sensor combines precise, low-power Tunneling Magnetoresistance (TMR) sensing elements with sophisticated digital signal processing.

Visit www.nve.com for complete specifications.

Evaluation Board Circuitry

The PCB assembly includes LED indicators for the sensor's A, B, Z, and Direction outputs.

An inexpensive 8-pin microcontroller counts the sensor's output pulses, resets the count when a "Z" pulse is detected, and drives a seven-segment display that serves as a pulse counter.

The board is powered by two 1.5 V AAA alkaline batteries.



Evaluation Board Layout



Operation

The heart of the ASR022 is a tunneling magnetoresistive (TMR) sensor element. In a typical configuration, an external magnet provides a magnetic field of 6 to 20 mT (60 to 200 Oe) in the plane of the sensor, as illustrated below for a bar magnet and a diametrically-magnetized disk magnet:



The sensor output is digitized with a 12-bit ADC, with the extra bits ensuring precision and computational accuracy. Factory-programmed signal conditioning is combined with a temperature sensor and digital linearization:



Quick Start

- \Rightarrow Place the horseshoe magnet in the Plexiglas pocket.
- \Rightarrow Turn the power switch ON.
- \Rightarrow Rotate the magnet and observe the indicator LEDs and the pulse count.
- ⇒ Observe the pulse count on the seven-segment display. The count should reset with each Z pulse.
- \Rightarrow Turn the power OFF when not in use to avoid draining the batteries.



Magnets

The sensor is accurate over a wide range of magnet spacing, especially with the relatively strong magnet provided with the kit. Smaller or weaker magnets may require closer spacing.

Low-cost radially-magnetized ferrite disk magnets can be used with these sensors in production. Bar magnets can also be used in some configurations.



Limited Warranty and Liability

Information in this document is believed to be accurate and reliable. However, NVE does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. In no event shall NVE be liable for any indirect, incidental, punitive, special or consequential damages (including, without limitation, lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Right to Make Changes

NVE reserves the right to make changes to information published in this document including, without limitation, specifications and product descriptions at any time and without notice.

Use in Life-Critical or Safety-Critical Applications

Unless NVE and a customer explicitly agree otherwise in writing, NVE products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical devices or equipment. NVE accepts no liability for inclusion or use of NVE products in such applications and such inclusion or use is at the customer's own risk. Should the customer use NVE products for such application whether authorized by NVE or not, the customer shall indemnify and hold NVE harmless against all claims and damages.

Applications

Applications described in this document are illustrative only. NVE makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and products using NVE products, and NVE accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NVE product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customers. Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products. NVE does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customers. In creasery testing for the customer's applications and products using NVE for a void a default of the applications and the products or of the application or use by customer's third party customers. NVE accepts no liability in this respect.

An ISO 9001 Certified Company

NVE Corporation 11409 Valley View Road Eden Prairie, MN 55344-3617

©NVE Corporation

All rights are reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

Manual No.: SB-00-120