




AG920-07E



Evaluation Kit

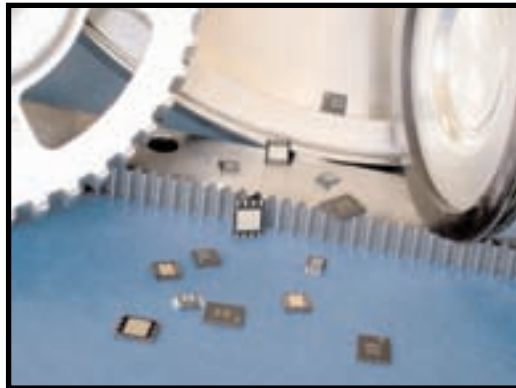

SN12197D

What's in This AG920-07E Kit?

| Qty. | Part No. | Marking | Description |
|------|------------|---------|---|
| 1 | ABL004-00E | FDBe | Single Differential Sensor, 1.0 mm Element Spacing |
| 1 | ABL005-00E | FDCe | Single Differential Sensor, 0.5 mm Element Spacing |
| 1 | ABL014-00E | FDDe | Dual Differential Sensor, 1.0 mm Element Spacing, 0.5 mm Phase Shift |
| 1 | ABL015-00E | FDFe | Dual Differential Sensor, 0.5 mm Element Spacing, 0.25 mm Phase Shift |
| 1 | AKL001-12 | P/N | Digital Output Differential Sensor, 1.0 mm Element Spacing |
| 1 | AKL002-12 | P/N | Digital Output Differential Sensor, 0.5 mm Element Spacing |
| 2 | DD001-12 | P/N | Digital Output Signal Processing IC for ABL Sensors |
| 2 | AG915-06 | N/A | M8 Round PCB for Mounting ABL Sensor |
| 2 | AG914-06 | N/A | M10 Round PCB for Mounting AKL Sensor |
| 1 | AG918-06 | N/A | Long, Narrow PCB for Mounting ABL Sensor Parallel to Long Axis |
| 1 | AG919-06 | N/A | Long, Narrow PCB for Mounting ABL Sensor Perpendicular to Long Axis |
| 1 | AG913-06 | N/A | PCB for Mounting Two DD001-12 ICs |
| 1 | AG916-06 | N/A | Long, Narrow PCB for Mounting AKL Sensor Perpendicular to Long Axis |
| 1 | AG917-06 | N/A | Long, Narrow PCB for Mounting AKL Sensor Parallel to Long Axis |
| 1 | AG911-06 | N/A | Long, Narrow PCB for Mounting ABL Sensors Parallel to Long axis, and One or Two DD001-12 ICs |
| 1 | AG912-06 | N/A | Long, Narrow PCB for Mounting ABL Sensors Perpendicular to Long axis, and One or Two DD001-12 ICs |
| 5 | 12216 | N/A | 6 mm Diameter x 4 mm Thick Round Ferrite Magnets |
| 5 | 12217 | N/A | 3.5 mm Diameter x 4 mm Thick Round Ferrite Magnets |

Putting Things Together

Soldering TDFN Packages

Apply a small amount of solder paste to the PCB pads. The part can then be hand placed on the PCB. If a reflow oven is available, the PCB can be run through the reflow oven to complete the soldering. In lieu of a reflow oven, parts can be soldered with a heat gun. Care should be taken to avoid overheating the parts.

Attaching Magnets

Two Ceramic-8 ferrite magnet sizes are included in this evaluation kit. Most of the PCBs in the kit have a circle indicating the magnet location. For testing, adhesives such as two-part household epoxies, “Super Glue” (cyanoacrylate adhesive), or RTV can be used to glue the magnets to the PCB. For more permanent, temperature-stable gluing for production environment, use a high temperature epoxy, such as 3M Scotch-Weld 2214 or equivalent. The magnets should be cleaned before they are glued to the PCBs.

Magnet position is not critical for the AKL-Series parts, or for ABL-Series parts with a digital output from a DD001-12 signal processing IC. However, perfectly centering the magnet directly behind the IC will result in the best airgap performance. Use the circle on the back of the PCB as a guide. For ABL-Series parts that must provide an analog output, the sensor’s offset and the maximum signal level are strongly influenced by the magnet’s position. For testing, the best procedure is to mount the sensor on the PCB, and then attach the magnet while monitoring the sensor offset. The objective is to position the magnet for zero sensor element offset. This provides optimal performance.

PCB Information

Nine PCBs are included in the kit, covering a variety of configurations.

Descriptions are as follows:

AG911-06—This PCB mounts an ABL sensor in an MSOP8 package and one or two DD001-12 signal processing ICs, for single or dual digital outputs. Space is also available for a 100 Ohm resistor (0805 package) and an NPN transistor (SOT-23 package), to configure a 3-wire current-sinking output. For a standard 2-wire output, use “VCC” for input voltage, and “2WIRE_OUT1” and “2WIRE_OUT2” as outputs. For a 3-wire output, use “VCC” for the input voltage, “GND” for ground, and “OUT1” and “OUT2” for outputs.

AG912-06—The same as the AG911-06, except the sensor is parallel, rather perpendicular, to the PCB long axis.

AG913-06—This PCB converts single or dual remote ABL sensor analog outputs to digital signals. VCC1 and VCC2 on the PCB must be connected to the input voltages for the DD001-12 parts on the PCB. “2WOUT1” and “2WOUT2” are the outputs in 2-wire configuration. Two 100 Ohm resistors (0805 package) and two NPN transistors (SOT-23 packages) can be added for 3-wire operation. For 3-wire operation, “3WOUT1” and “3WOUT2” are the current sinking outputs, and “3WGND” is ground. Sensor connections are as follows:

| ABL004/5 Pin | ABL014/15 Pin | AG913-06 Connection |
|----------------|-----------------|---------------------|
| Pin 4 (Ground) | Pin 1 (Ground1) | SG1 |
| Pin 5 (Out-) | Pin 2 (Out-1) | B1- |
| Pin 1 (Out+) | Pin 3 (Out+1) | B1+ |
| Pin 8 (VCC) | Pin 4 (VCC1) | VREG1 |
| | Pin 5 (Ground2) | SG2 |
| | Pin 6 (Out-2) | B2- |
| | Pin 7 (Out+2) | B2+ |
| | Pin 8 (VCC2) | VREG2 |

AG914-06—This PCB is designed to mount an AKL-Series digital output sensor in the TDFN-SO8 package. Four connections are available to the PCB: VCC (Input Voltage, Pin 6), GND (Ground, Pin 5), B+ (Bridge Out +, Pin 4), and B- (Bridge Out -, Pin 5). The bridge outputs are provided for interest only, since this is a digital output sensor. Figure 1 shows the PCB connections.

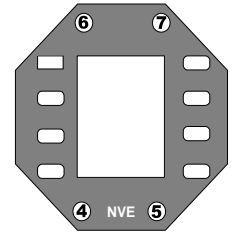


Figure 1.
AG914-06 PCB

AG915-06—This PCB is designed to mount an MSOP8 ABL sensor for use in an M8 housing. Figure 2 shows the connections.

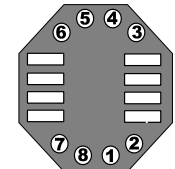


Figure 2.
AG915-06 PCB

AG916-06—This PCB is designed to mount an AKL sensor in the TDFN SO8 package. The PCB has connections for converting to a 3-wire output by adding a 100 Ohm resistor (0805 package) and an NPN output transistor (SOT-23 package). For this PCB, VCC is connected to the input supply voltage and “2W_GND” is the output for the 2-wire configuration. “3W_GND” is the ground for the 3-wire configuration, and “3W_OUT” is the current-sinking output in the 3-wire configuration.

AG917-06—This PCB is identical to AG916-06, except the sensor is rotated 90 degrees for sensitivity parallel to the long axis of the board.

AG918-06/AG919-06—These two PCBs are designed for MSOP8 sensors with no external components. The AG918-06 and AG919-06 are oriented in different sensitivity directions. The PCB connections are labeled P1 through P8, corresponding to pins 1 through 8 of the MSOP8 package.

Application Tips

Overview

GT Sensors™ are designed for detection of gear teeth and magnetic encoder wheels in industrial speed sensing.

GT Sensors are based on Giant Magnetoresistance, which provides high sensitivity and low hysteresis to detect even the smallest gear teeth. GT Sensors provide a 50% duty cycle output with wide air gap and temperature tolerances.

As shown in the diagrams on the next page, GT Sensors have four GMR sensing resistors, which are connected as a Wheatstone bridge.

The direction of sensitivity is parallel to the sensor plane. A biasing magnet provides field, and the flux lines are deflected into the direction of sensitivity by passing metal gear teeth. The sensor produces a sinusoidal output with one cycle per tooth.

Sensor-to-Magnet Spacing

About 1.5 millimeters between the back of the sensor and the face of the bias magnet keeps flux-lines flexible and able to follow teeth. Locating the sensor and magnet on opposite sides of a circuit board often provides good spacing.

You can use a thick circuit board with a milled magnet pocket to precisely position the magnet on a PCB. Most board manufacturers have that capability.










AC Couple to Eliminate Offset

If zero-speed operation is not needed, the sensor can be AC-coupled to eliminate offset from various imperfections.

The Right Magnet

The right magnet is important. Ceramic-8 magnets, such as those included in this kit, are recommended for most applications. They are inexpensive and have good field properties. Alnico-8 magnets are well-suited for high-temperature operation. Rare-earth magnets are not recommended because they too easily saturate the sensors.

GT Sensor Operation

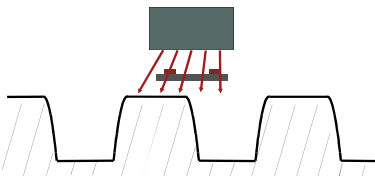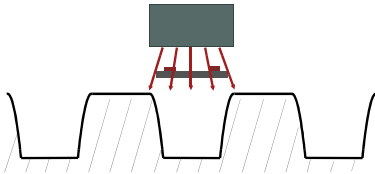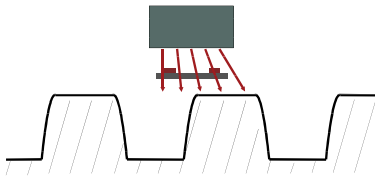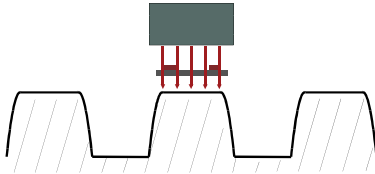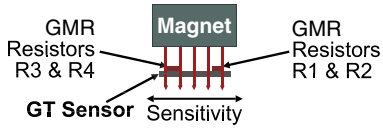

Visit www.nve.com for more applications information.

Limited Warranty and Liability

Information in this document is believed to be accurate and reliable. However, NVE does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. In no event shall NVE be liable for any indirect, incidental, punitive, special or consequential damages (including, without limitation, lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Right to Make Changes

NVE reserves the right to make changes to information published in this document including, without limitation, specifications and product descriptions at any time and without notice.

Use in Life-Critical or Safety-Critical Applications

Unless NVE and a customer explicitly agree otherwise in writing, NVE products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical devices or equipment. NVE accepts no liability for inclusion or use of NVE products in such applications and such inclusion or use is at the customer's own risk. Should the customer use NVE products for such application whether authorized by NVE or not, the customer shall indemnify and hold NVE harmless against all claims and damages.

Applications

Applications described in this document are illustrative only. NVE makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and products using NVE products, and NVE accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NVE product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customers. Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products. NVE does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customers. The customer is responsible for all necessary testing for the customer's applications and products using NVE products in order to avoid a default of the applications and the products or of the application or use by customer's third party customers. NVE accepts no liability in this respect.

An ISO 9001 Certified Company

NVE Corporation
11409 Valley View Road
Eden Prairie, MN 55344-3617

©NVE Corporation

All rights are reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

Manual No.: SN12197D